

Installation Instructions for JK 4DR Warrior Long Cage Set

Install Side Window Nets

Step One.

Start by installing the d-rings on panel behind carpet by rear door latch. This hole is a pre-existing hole. Be sure D-Ring is facing the front of the jeep. Once ring is installed, push carpet back in place leaving the D-ring out. Another option to this is to cut a small slit in the carpet, and pull d-ring through it.



Step Two.

With label facing out, install the top 2 straps around the roll cage on top. Do not tighten any of the straps yet.



Step Three.

Working counter clockwise, install the 3rd strap around the rear roll bar, be sure to go behind the seat belt.




Step Four.

Insert the corner strap thru the opening in the seatbelt retractor box. Bring this strap through the opening in the seatbelt retractor box and slide it under the plastic and bring strap around and tighten.



2007-2010

For 2011-2016 Models, Bring the long strap around the plastic seatbelt retainer box, bring the buckle end around the other way. Insert long strap through the built in d-ring on the floor of the cargo area, and connect to the buckle and pull tight.

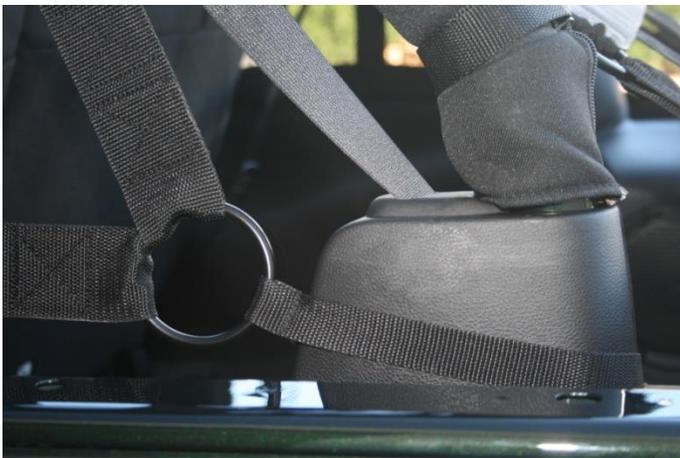

Step Five

Install the last strap through the d-ring that you just installed.

Now adjust the net, and tighten.



Next start on the cage

With the label facing out of the jeep on the passenger side, start at the bottom. Attach hooks in groove of the tailgate bar that comes with the soft top.



Next, working your way up the back of the cage, attach the hooks in the existing cut outs on the rail of your jeep. Do not tighten buckle just yet.



2007 – 2010

For 2011-2016 Models, insert snap hook in the hole on the side rail, then insert strap through the hook.



2011-2016

Next strap ties around the roll bar, just above the plastic seatbelt retractor box.



Attach the next 2 straps, be sure to go above the seatbelt.

Start tightening the 4th strap first. Then tighten and adjust the previous straps.



Then continue all the way to the front, attaching all the straps on the roll bar, but do not tighten.

The ring on top with no strap is integrated with the side window strap.



The front corner straps slip underneath the plastic cover in the corner and tie around the metal roll bar.

Attach the front center buckle to your footman loop just above your windshield. **NOW PULL THIS TIGHT UNTILL THE LINES ARE STRAIGHT, BEFORE YOU TIGHTEN ANY OF THE OTHER STRAPS.**

Once everything is in place, adjust and tighten all the straps. Insert excess straps through slip keepers.

Works with the Soft Top up, down or off. Works with Hard top on too, just omit the first 2 steps.

If soft top is going to be put down or up, the bottom 2 buckles on the cage net need to be undone, once Top is in place, then reattach the last 2 buckles.