


Installation Instructions for JK 2DR Warrior Cage Set

Install Side Window Nets


Step One.

Install side windows. Start with the side closest to the cockpit. Label should be facing out. Attach all 6 buckles making sure to go under the seatbelt. The top strap should come up around the **top** of your roll cage. The back bottom strap, bring this strap through the opening in the seatbelt retractor box and slide it under the plastic and bring strap around and tighten. Tighten and adjust all straps.

2007-2010

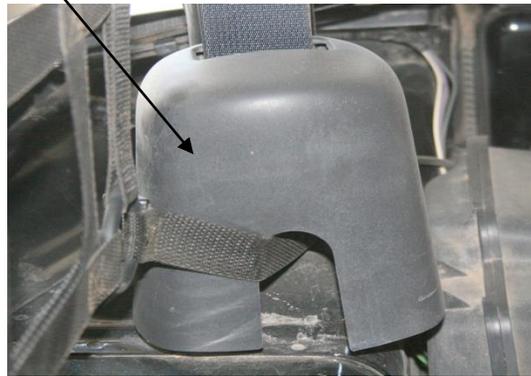

For 2011 -2016, Bring the long strap around the plastic seatbelt retainer box, bring the buckle end around the other way. Insert long strap through the built in d-ring on the floor of the cargo area, and connect to the buckle and pull tight.

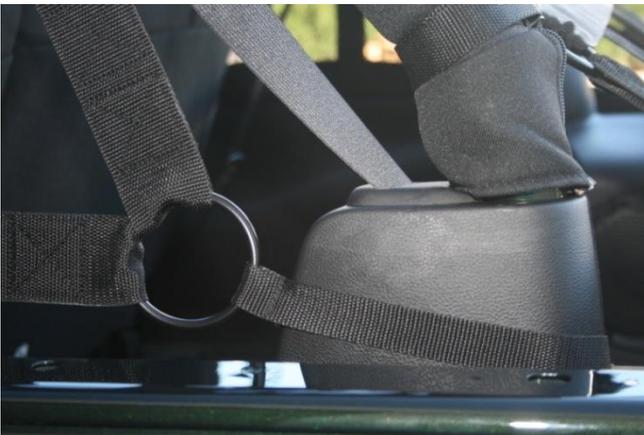



Step Two.

Now install Cage. Label facing out, start at the bottom, attach hooks in groove of tailgate bar.



Step Three.

Insert the hooks in the cutout on the side of your rail. **Do not tighten until instructed to do so.**

2007 - 2010




For 2011 - 2016, insert snap hook in the hole on the side rail, then insert strap through the hook.



Step Four.

Next strap ties around the roll bar, just above the plastic seatbelt retractor box.

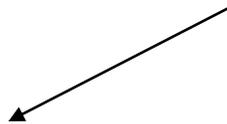

Attach the next 2 straps.

Attach 4th strap just above the seatbelt. Start tightening the 4th strap first. Then tighten and adjust the previous straps.



Step Five

Then continue all the way to the front, attaching all the straps on the roll bar, but do not tighten.

Step Six

Attach front straps with the strap going out towards the outside of the jeep, and the buckle going towards the inside of the jeep. Bring the long strap around the outside corner of the roll bar, bring it under the roll bar and back up to secure to the cam buckle.



Now adjust and tighten all straps.

Once everything is in place, adjust and tighten all the straps. Insert excess straps through the slip keepers.



Works with the Soft Top up, down or off. Works with Hard top on too, just omit the first 2 steps.

If you have any questions regarding the install, please feel free to call us.

(661) 294-3000